


## How do you change the radio channel on an SR500 receiver?

### Answer:

First you must exit the survey and return to the Main\ menu and then do the following steps:

Step	Action	Display
1	From the Main\ menu: <ul style="list-style-type: none"> <li>Press the <b>CONFIG</b> button.</li> </ul> <p>This takes you to the CONFIGURE\ screen.</p>	
2	In the CONFIGURE\ screen: <ul style="list-style-type: none"> <li>Use the up/down arrow buttons to select <b>4 Interfaces</b>.</li> <li>Press the <b>F1 (CONT)</b> button.</li> </ul> <p>This takes you to the CONFIGURE\ Interfaces screen.</p>	
3	In the CONFIGURE\ Interfaces screen: <ul style="list-style-type: none"> <li>Use the up/down arrow buttons to select <b>1 Real-Time</b>.</li> <li>Press the <b>F5 (CTRL)</b> button.</li> </ul> <p>This takes you to the CONFIGURE\ Radio Channel screen.</p>	

<p><b>4</b></p> <ul style="list-style-type: none"> <li>• Enter a radio channel in the “Channel” field.</li> <li>• Press the <b>Enter</b> button.</li> <li>• Press the <b>F1 (CONT)</b> button twice.</li> </ul>	<p>In the CONFIGURE\ Radio Channel screen:</p> <p>This returns you to the Main\ menu screen.</p>	
---	--	--

### Restart your survey

**Note:** This must also be done at the base receiver, that is, both receivers must be on the same channel. However, with the new PDL base radios, the channel can be changed on the radio without the SR500 receiver.