

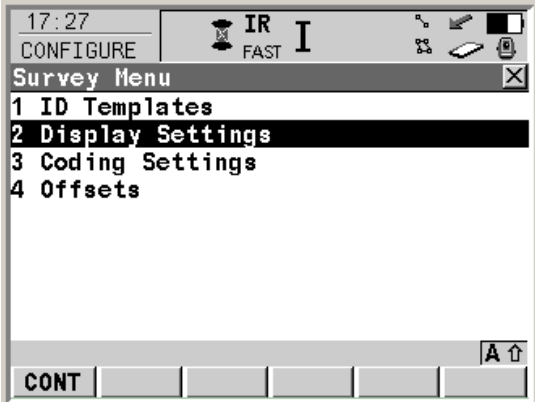
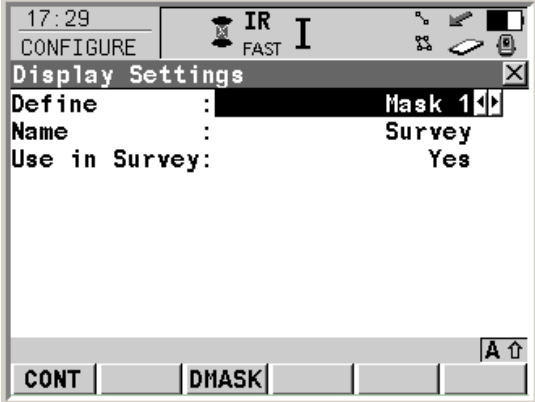
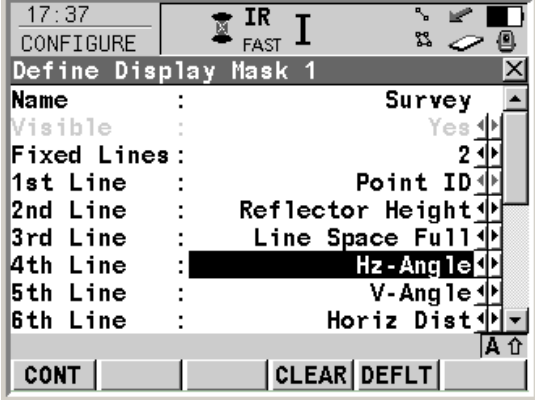
Leica TPS1200 FAQ

Question How do I display the AngleRight reading?

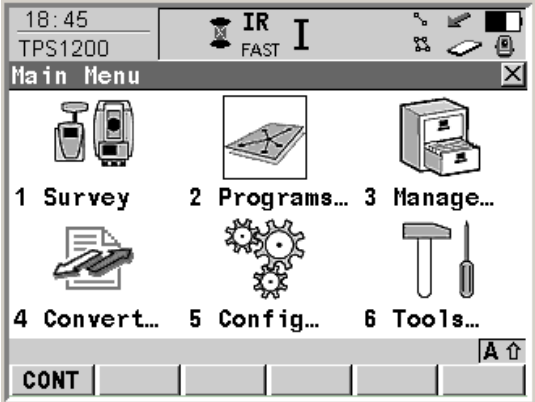
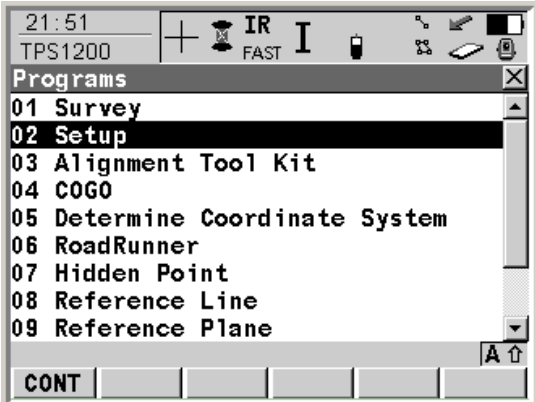
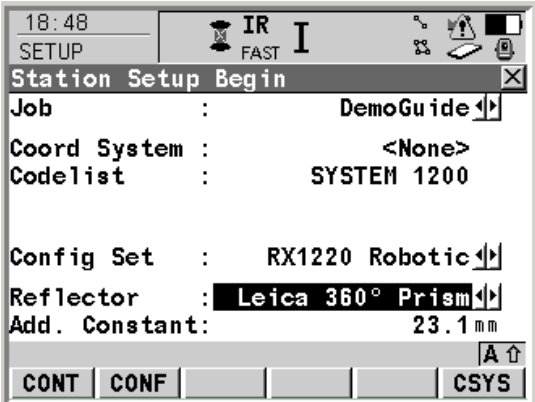
Answer Follow the steps below to add AngleRight to the display screen.

Step	Action	Display
1	<p>From the Main Menu on the TPS1200 instrument:</p> <ul style="list-style-type: none"> Select 5 Config... from the Main Menu. <p>This takes you to the "Configuration:" screen.</p>	
2	<p>From the "Configuration:" screen:</p> <ul style="list-style-type: none"> Select 1 Survey Settings.... <p>This takes you to the "Survey Menu" screen.</p>	

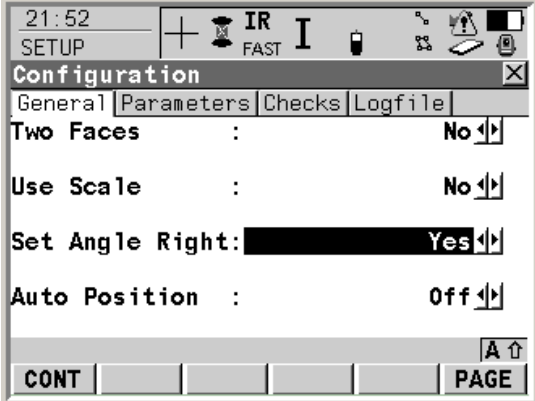
Continued on next page

Step	Action	Display
3	<p>From the "Survey Menu" screen:</p> <ul style="list-style-type: none"> Select 2 Display Settings. <p>This takes you to the "Display Settings" screen.</p>	
4	<p>From the "Display Settings" screen:</p> <ul style="list-style-type: none"> Select Define: Mask 1. Press the F3 (DMASK) button. <p>Note: You may want to change this setting in more than one display mask, repeat the field selection and changes in step 5 for each display mask.</p> <p>This will take you to the "Define Display Mask 1" screen.</p>	
5	<p>In the "Define Display Mask 1" screen:</p> <p>Note: You can either add the Angle Right field to the display or you can replace the Hz Angle field with the Angle Right field. In this case we will replace the Hz Angle.</p> <ul style="list-style-type: none"> Highlight the Hz-Angle field. Press the ENTER button to access the choice list. Select Angle Right from the choice list and press the ENTER button. Press the F1 (CONT) button. Press the F1 (CONT) button again. <p>This brings you back to the "Main Menu" screen.</p>	

Continued on next page

Step	Action	Display
6	From the Main Menu on the TPS1200 instrument: <ul style="list-style-type: none"> • Select 2 Programs.... This will take you to the "Programs" screen.	
7	From the "Programs" screen: <ul style="list-style-type: none"> • Select 2 Setup. This will take you to the "Station Setup Begin" screen.	
8	In the "Station Setup Begin" screen: <ul style="list-style-type: none"> • Press the F2 (CONF) button. This will take you to the "Configuration" screen.	

Continued on next page

Step	Action	Display
9	In the "Configuration" screen: Under the General tab: <ul style="list-style-type: none"> • Set Angle Right: Yes • Press the F1 (CONT) button. 	 <p>The screenshot shows the 'Configuration' window with the 'General' tab selected. The settings are as follows:</p> <ul style="list-style-type: none"> Two Faces : No Use Scale : No Set Angle Right: Yes Auto Position : Off <p>At the bottom, there are buttons for 'CONT' and 'PAGE'.</p>

Note:

These settings to use and display the AngleRight value are set in the configuration. If you select a different or create a new configuration, you will have to change the display settings for that configuration too. After the changes have been made, they will be saved and you won't have to make these changes each time you use a configuration.