

Leica System 1200

Quick Guide

How to Delete a Single Application in System 1200


General steps to delete a single application in System 1200 GPS or TPS




1. From the Main Menu, select **6 Tools...**, then select **3 Upload System Files** from the Tools Menu.



2. From the Upload System Files menu, select **1 Application Programs**.

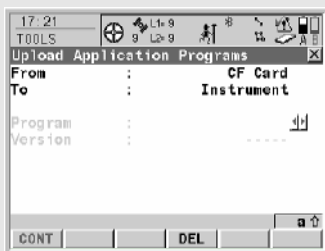

3. From the Upload Application Programs menu press **F4 DEL (Delete)** to view the programs currently installed on the instrument.

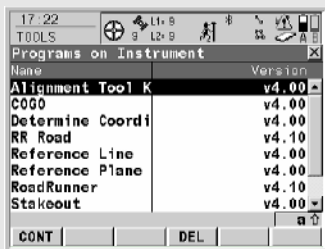

4. From the Programs on Instrument menu select the program from the list that you want to delete, in this case Alignment Tool Kit, and press **F4 DEL(Delete)**.



5. When prompted, press **F6 YES** to confirm deleting the program.



6. Notice the Alignment Tool Kit no longer appears in the program list as it has been deleted from the system RAM. The previous steps can be repeated to remove additional programs. Otherwise, press the **SHIFT - F6 QUIT** two times to return to the Main Menu.